




HomeControl Flex Installation: TG-1 Express with DMP XT30

The following information is to serve as a guide for installations of TG-1Express devices enabled for Interactive Services with the DMP XT30. The configuration shown in the diagram below is an example of how a proper installation could look. The output and zone could differ from the diagram, without changing the outcome of the installation.

Installation Diagram

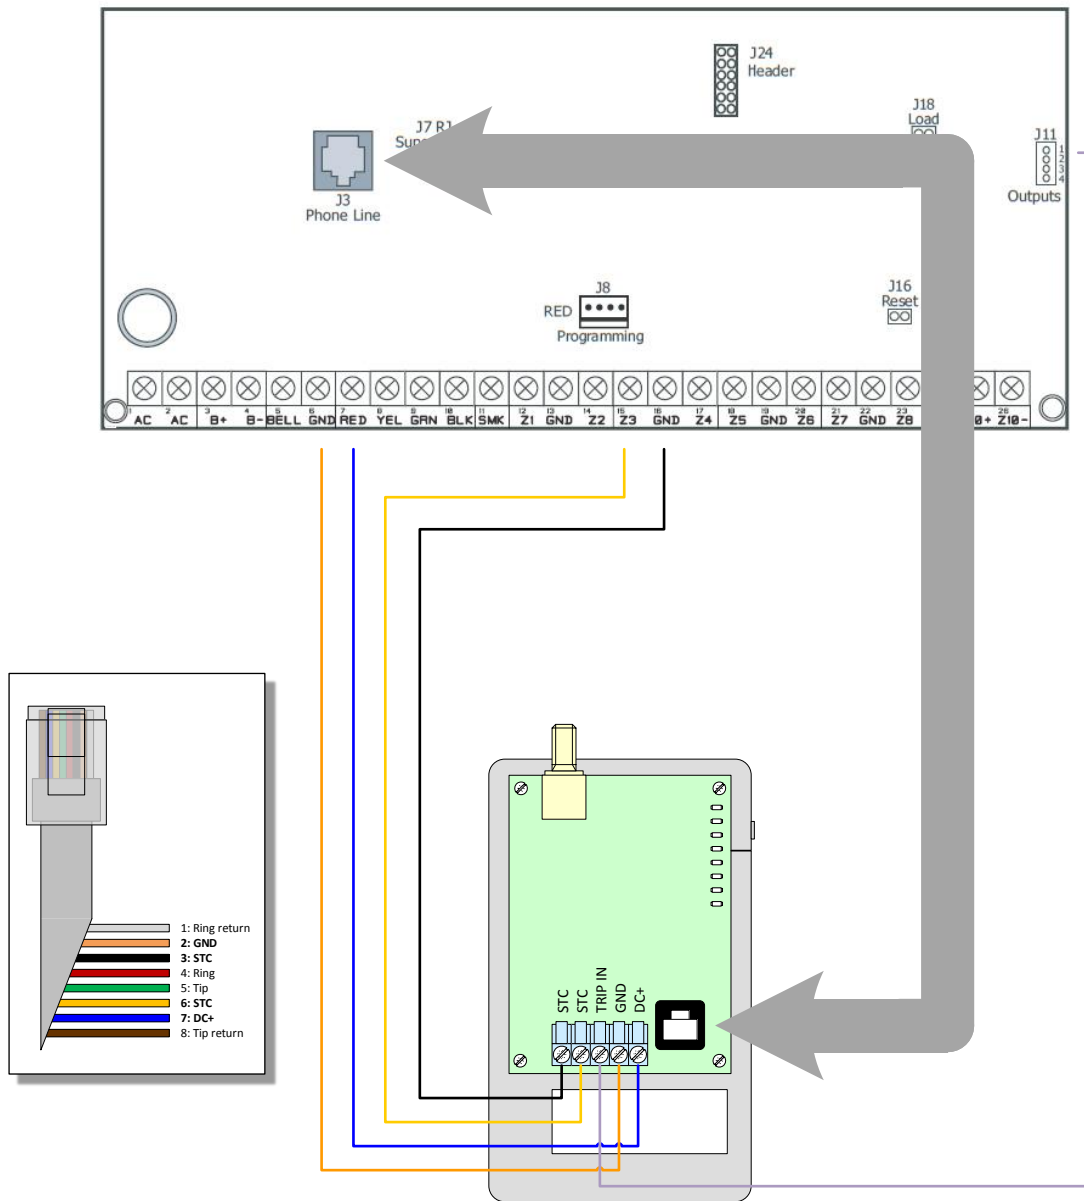

Note: Although a resistor is not depicted here, one may be required by the Keyswitch zone in accordance to the Panel's specifications. For more information, please refer to the Panel's Installation and/or Programming Manuals.



Programming Steps

After getting into configuration mode, check/do the following:

Set to Contact ID:

Keypad Display	Enter on Keypad	Comments
SYSTEM READY	6653	Enter Programming mode (use steps to enter any lockout code if necessary).
PROGRAMMER	[CMD] [CMD]	Press [CMD] to get to the Communication menu.
COMMUNICATION	[select]	Press any [select] key to enter the menu.
COMMUNICATION ACCOUNT NO: XXXXX	[CMD] [CMD]	Press [CMD] to get to the Comm Type option.
COMMUNICATION COMM TYPE: DD	[select]	Press any [select] key to enter the menu of formats.
COMMUNICATION DD CID NET CELL	[CID]	Press the [select] key under the CID option to select.
BACKUP CELL NO	[CMD] [CMD] [CMD] ...	Press the [CMD] button enough times to get to the O/C User screen.

Enable Open/Close Reports:

Keypad Display	Enter on Keypad	Comments
COMMUNICATION O/C USER YES	[select]	Press the [select] key furthest to the right. If already enabled, there will be a YES above it.
COMMUNICATION O/C USER YES	[CMD] [CMD] [CMD] ...	If programming more than one receiver, use [CMD] to get to the second receiver and follow same procedure.
COMMUNICATION O/C USER YES	[CMD] [CMD] [CMD] ...	Press the [CMD] button enough times to get to the System Reports screen.
SYSTEM REPORTS	[select]	Press any [select] key to enter the menu.
SYSTEM REPORTS O/C RPTS YES	[select]	Press the [select] key furthest to the right. If already enabled, there will be a YES above it.
SYSTEM REPORTS O/C RPTS YES	[←]	Press to go back to main menu.

Program Output:

Keypad Display	Enter on Keypad	Comments
SYSTEM REPORTS	[CMD] [CMD] [CMD]	Press the [CMD] button 3 times to get to the Output Options screen.
OUTPUT OPTIONS CO OUTS: -----	1	Press 1 for Output 1 or number X, where X is any number 1-4 for the output to be used.
OUTPUT OPTIONS CO OUTS: 1----	[CMD]	Press [CMD] to move to the next setting.
OUTPUT OPTIONS CUTOFF TIME: 0	[CMD] ...	Press [CMD] and verify that all the settings are set to zero. Stop when you get to the Armed option.
OUTPUT OPTIONS ARMED OUT: 0	1	Press 1 to enable Armed status.
OUTPUT OPTIONS ARMED OUT: 1	[CMD] ...	Press [CMD] and continue verifying that all other settings are set to zero. Stop when you get to the Output Options.



Program Keyswitch zone:

Keypad Display	Enter on Keypad	Comments
OUTPUT OPTIONS	[CMD] [CMD] [CMD]	Press the [CMD] button 3 times to get to the Zone Information screen.
ZONE INFORMATION	[select]	Press any [select] key to enter the menu.
ZONE INFORMATION ZONE NO: —	X [CMD]	Press X, where X is the zone number that will be used for keyswitch.
ZONE INFORMATION * UNUSED *	[select]	Press any [select] key to program that zone.
ZONE INFORMATION —	(type in “keyswitch” zone name) [CMD]	Using the keypad, type in a zone name and press [CMD]
ZONE INFORMATION ZONE TYPE: BLANK	[select]	Press any [select] key to program that zone type.
ZONE INFORMATION — NT DY EX	[CMD] [CMD]	Press [CMD] twice to get to Arming option.
ZONE INFORMATION A1 A2 FV AR	[select]	Press the [select] key furthest to the right. It should have AR (arming) right above it.
ZONE INFORMATION ARM AREAS: PERIM	[select]	Press any [select] key to look at available options.
ZONE INFORMATION PERIM ALL	[select]	Depending on the installation, choose Perim for perimeter zone arming only or All by pressing the [select] key below the option.
ZONE INFORMATION STYLE: TOGGLE	[CMD]	Verify that the zone is set for Toggle. Press [select] to change if necessary.
ZONE INFORMATION NEXT ZN? NO YES	[select]	Press the [select] key furthest to the right (below the Yes).
ZONE INFORMATION ZONE NO: —	[←]	Press to go back to main menu.
ZONE INFORMATION	[CMD]	Press [CMD] button to get to the STOP menu option.
STOP	[select]	Press any [select] key to exit programming.

Reference Note

For more detailed TG-1B and TG-4 installation and programming instructions, refer to the HomeControl Flex Installation Guide.