




# HomeControl Flex Installation: TG-1 Express with DSC 5020

The following information is to serve as a guide for installations of TG-1Express devices enabled for Interactive Services with the DSC 5020. The configuration shown in the diagram below is an example of how a proper installation could look. The output and zone could differ from the diagram, without changing the outcome of the installation.

## Installation Diagram

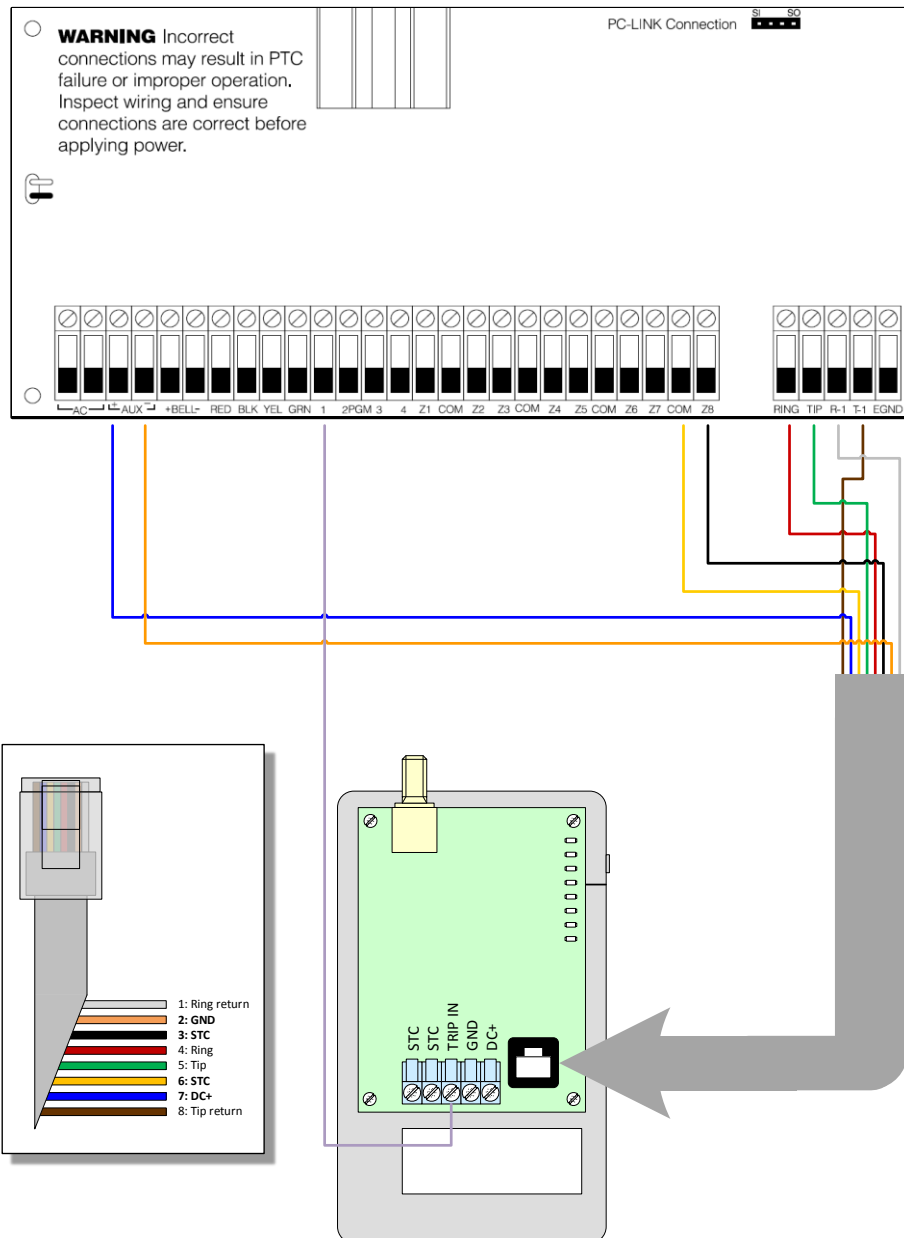

**Note:** Although a resistor is not depicted here, one may be required by the Keyswitch zone in accordance to the Panel's specifications. For more information, please refer to the Panel's Installation and/or Programming Manuals.



## Programming Steps

---

After getting into configuration mode, check/do the following:

### *Program Keyswitch zone:*

Keypad Display	Enter on Keypad	Comments
Enter Section	00x	Program Zone "x"
Enter Data	22#	Momentary Keyswitch Arming, # to Confirm.

### *Program Output:*

Keypad Display	Enter on Keypad	Comments
Enter Section	009	Output 1 Programming
Enter Data	05#	Use Output 1 as System Arm Status, # to Confirm.

### *Enable Open/Close Reports:*

Keypad Display	Enter on Keypad	Comments
Enter Section	380	Open/Close Reporting
Enter Data	1#	Enable Open/Close Reporting for 1 <sup>st</sup> Communicator.
Enter Section	367	Open/Close Communicator Call Directions.
Enter Data	1#	Enable Open/Close Call Directions for 1 <sup>st</sup> Communicator, # to Confirm.

### *Set to Contact ID:*

Keypad Display	Enter on Keypad	Comments
Enter Section	350	Alarm Reporting Format
Enter Data	03#	Set Alarm Reporting Format to Contact ID, # to Confirm.
Enter Section	#	Press # a Few Times Until Exit Installation Mode.

## Reference Note

---

For more detailed TG-1B and TG-4 installation and programming instructions, refer to the HomeControl Flex Installation Guide.