


Telguard Interactive Installation: TG-1 Express with DSC 5020

The following information is to serve as a guide for installations of TG-1Express devices enabled for Interactive Services with the DSC 5020. The configuration shown in the diagram below is an example of how a proper installation could look. The output and zone could differ from the diagram, without changing the outcome of the installation.

Installation Diagram

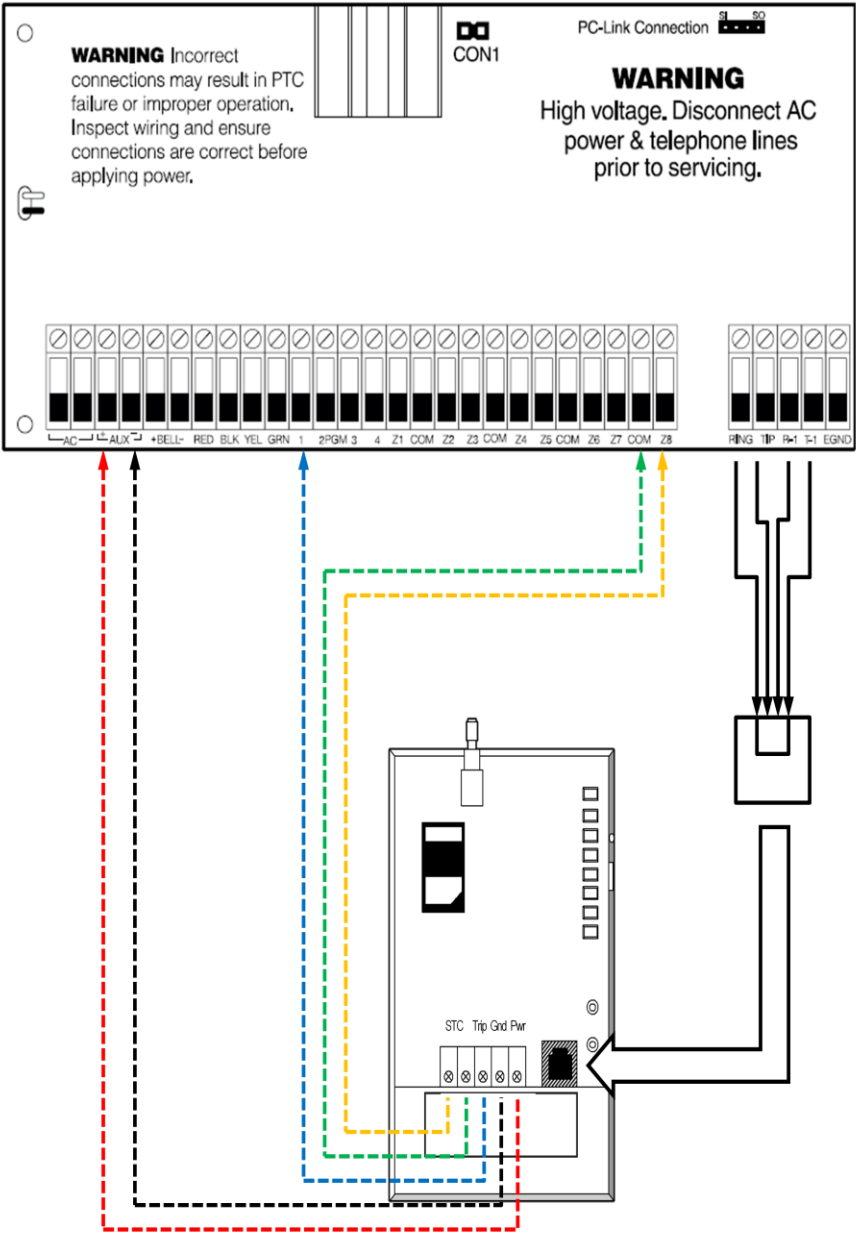

Programming Steps

After getting into configuration mode, check/do the following:

Program Keyswitch zone:

Keypad Display	Enter on Keypad	Comments
Enter Section	00x	Program Zone "x"
Enter Data	22#	Momentary Keyswitch Arming, # to Confirm.

Program Output:

Keypad Display	Enter on Keypad	Comments
Enter Section	009	Output 1 Programming
Enter Data	05#	Use Output 1 as System Arm Status, # to Confirm.

Enable Open/Close Reports:

Keypad Display	Enter on Keypad	Comments
Enter Section	380	Open/Close Reporting
Enter Data	1#	Enable Open/Close Reporting for 1 st Communicator.
Enter Section	367	Open/Close Communicator Call Directions.
Enter Data	1#	Enable Open/Close Call Directions for 1 st Communicator, # to Confirm.

Set to Contact ID:

Keypad Display	Enter on Keypad	Comments
Enter Section	350	Alarm Reporting Format
Enter Data	03#	Set Alarm Reporting Format to Contact ID, # to Confirm.
Enter Section	#	Press # a Few Times Until Exit Installation Mode.

Reference Note

For more detailed installation and programming instructions, refer to the Telguard Interactive Installation Guide (P/N 56043501).