


## Telguard Interactive Installation: TG-1 Express with DSC Alexor

The following information is to serve as a guide for installations of TG-1Express devices enabled for Interactive Services with the DSC 9155 (Alexor). The configuration shown in the diagram below is an example of how a proper installation could look. The output and zone could differ from the diagram, without changing the outcome of the installation.

### Installation Diagram

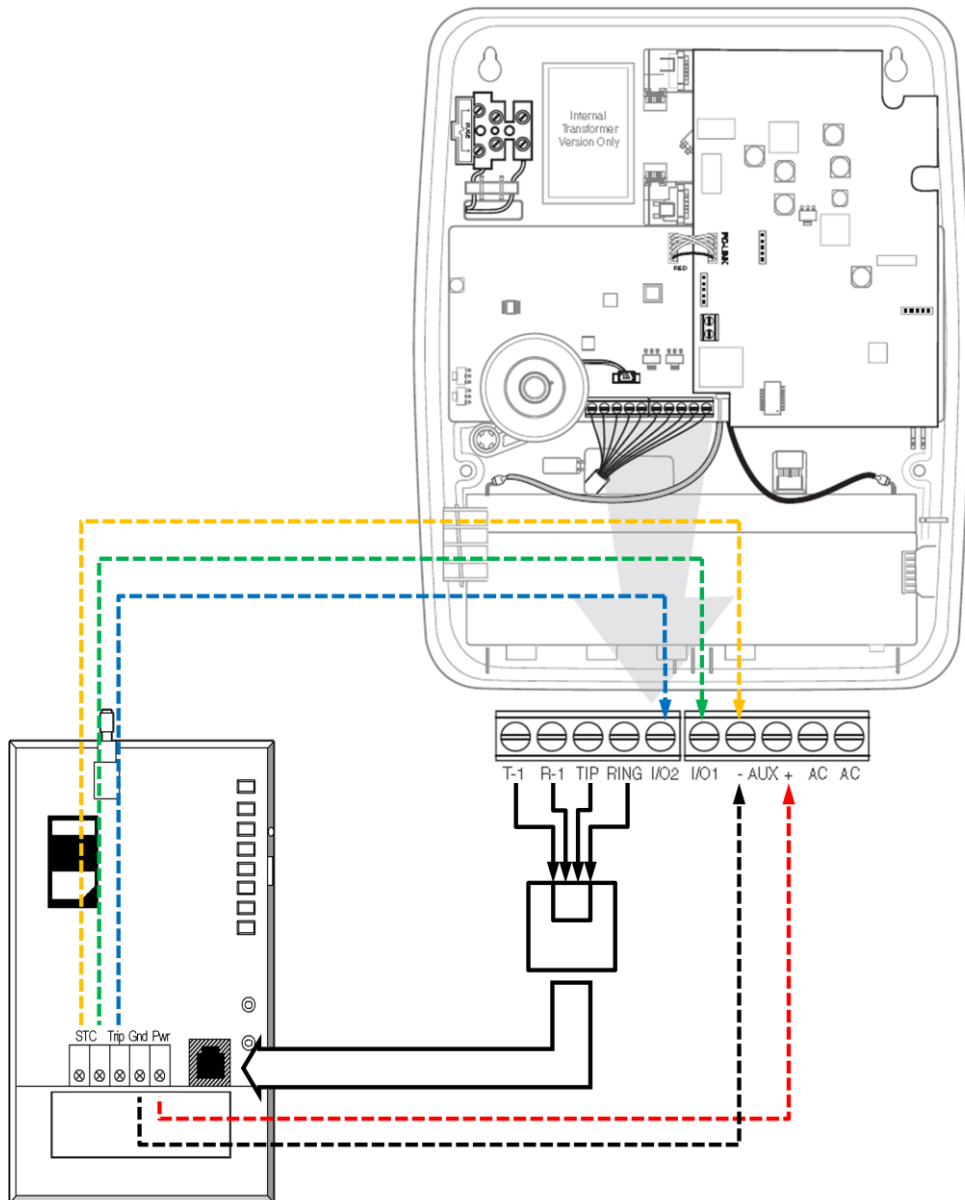

## Programming Steps

After getting into configuration mode, check/do the following:

### *Program Keyswitch zone and Output:*

| Keypad Display           | Enter on Keypad | Comments   |
|--------------------------|-----------------|--|
| Enter Section<br>_____   | 009             | Enter I/O Programming.   |
| Enter Data<br>XX         | 22              | Enter 22 to program Zone Type Keyswitch for I/O 1, XX is previous value.   |
| Enter Data<br>XX         | 05              | Enter 05 to program Armed status on I/O 2, XX is previous value  |
| Enter Section<br>_____   | 013             | Enter First System Options (to select I/O as Input or PGM)   |
| Toggle Option<br>-----   | 1               | Assuming the panel is defaulted, press the toggle buttons until 1 is ON and 2 is OFF.  |
| Toggle Option<br>1-----  | #               | Press # to go to the Next section  |
| Enter Section<br>_____   | 133             | Enter I/O 1 Programming.   |
| Toggle Option<br>-----   | X, ... 9        | Toggle ON the options (1-8) that best suit your application. Press 9 to move to options 9-16   |
| Toggle Option<br>-----7- | 7 #             | Make sure that option 15 (shows as 7) is selected. <b>This standard mode of operation REQUIRES a resistor across the STC connection.</b> |
| Enter Section<br>_____   | 206             | Enter Zone Assignment.   |
| Toggle Option<br>-----   | 1               | Toggle option 1 to ON to enable the keyswitch zone.  |
| Toggle Option<br>1-----  | #               | Press # to go to the Next section  |

### *Enable Open/Close Reports:*

| Keypad Display          | Enter on Keypad | Comments                                     |
|-------------------------|-----------------|--|
| Enter Section<br>_____  | 351             | To program phone 1 call direction.           |
| Toggle Option<br>-----  | 1               | Toggle 1 to ON for alarms.                   |
| Toggle Option<br>1----- | #               | Press # to go to the Next section            |
| Enter Section<br>_____  | 367             | Open/Close Communicator Call directions.     |
| Toggle Option<br>-----  | 1               | Toggle 1 to ON to enable Open/Close reports. |
| Toggle Option<br>1----- | #               | Press # to go to the Next section            |
| Enter Section<br>_____  | 380             | Enter First Communication Options.           |
| Toggle Option<br>-----  | 1               | Toggle 1 to ON to enable communications.     |
| Toggle Option<br>1----- | #               | Press # to go to the Next section            |

***Set to Contact ID:***

| <b>Keypad Display</b>  | <b>Enter on Keypad</b> | <b>Comments</b>  |
|------------------------|------------------------|--|
| Enter Section<br>_____ | 350                    | Program Alarm Format.  |
| Enter Data<br>XX       | 03 #                   | 03 is for CID format, XX is the previous programmed value, # to return to Enter Section. |
| Enter Section<br>_____ | #                      | To get back to main menu.  |

## **Reference Note**

---

For more detailed installation and programming instructions, refer to the Telguard Interactive Installation Guide (P/N 56043501).